



	spare part no
① OVERHEAT THERMOSTAT	362417
③ MAIN BLOWER MOTOR	365111
⑤ OUTER CYLINDER FOR BURNER	369028
⑦ RADIATION ELEMENT	369007
⑨ GASKET FOR GLOW PLUG	364130
⑪ THERMO ELEMENT	362601
⑬ COMBUSTION BLOWER	365315
⑮ FUSE 5 A, SLOW	362113
⑰ FUEL PUMP, FC 7	367506

	spare part no
② HEAT EXCHANGER	368609
④ COMPLETE MAIN BLOWER	365411
⑥ BOTTOM MAT, Ø 85 MM	364037
⑧ GASKET FOR T4 THERMO ELEMENT	364015
⑩ GLOW PLUG	362502
⑫ FUEL PIPE	367306
⑭ CONTROL UNIT	361068
⑯ FUSE 15 A	362110
⑱ BURNER CYLINDER, COMPLETE	369025