


# TREND STYLE BLACK 3B

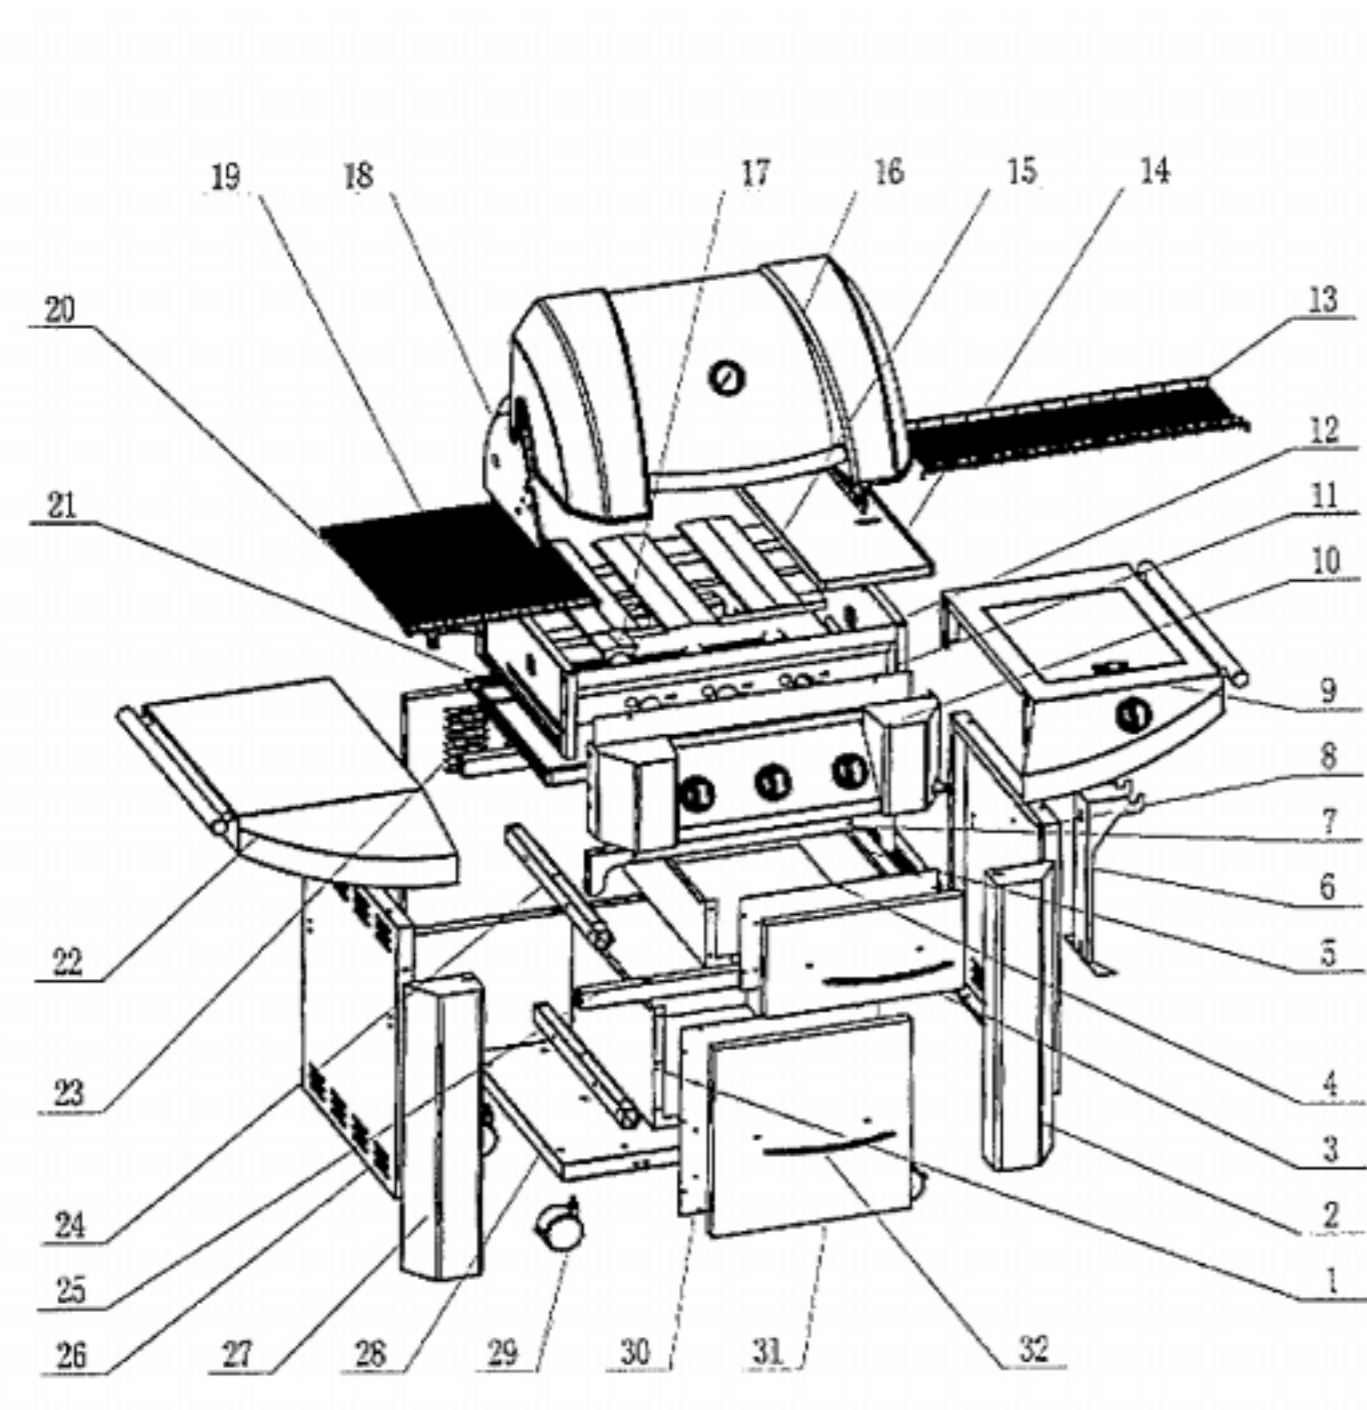

## Trend Style 3B

2	441445	Heat dist.plates 2	Trend Style 3B - Varmefordeler(2)
3	441415	Cooking plate 3	Trend Style 3B - Grillplate (3)
4	441416	Cooking Grid 4	Trend Style 3B - Grillrist (4)
5	441417	Warming Rack 5	Trend Style 3B - Varmerist (5)
6	441418	Grease Tray 6	Trend Style 3B - Fettsamler (6)
7	441419	L.S table body 7	Trend Style 3B - Sidebord venstre (7)
8	441421	L.S front panel 8	Trend Style 3B - Frontpanel sidebord venstre (8)
9	441423	Sideburner Grate 9	Trend Style 3B - Rist sidebr (9)
10	441475	SB Drip Pan 10	Trend Style 3B - SB skål (10)
11	441424	R.S table 11	Trend Style 3B - Sidebord høyre (11)
12	441426	Side Burner 12	Trend Style 3B - Sidebrenner(12)
13	441427	R.S Front panel 13	Trend Style 3B - Frontpanel høyre (13)
14	441429	Hose 14	Trend Style 3B - Gasslange SB(14)
16	441430	L.S panel, cart 16	Trend Style 3B - Sidepanel venstre (16)
17	441444	Wheels 17	Trend Style 3B - Hjul (17)
18	441443	Locking Casters 18	Trend Style 3B - Lås til hjul(18)
19	441432	Bottom cart panel 19	Trend Style 3B - Bunnpanel (19)
20	441434	Back Panel 20	Trend Style 3B - Bakpanel (20)
21	441476	Cart Crossbeam 21	Trend Style 3B - List front (21)
22	441440	R.S panel, cart 22	Trend Style 3B - Sidepanel høyre (22)
23	441436	Left Door 23	Trend Style 3B - Dør Venstre (23)
24	441438	Right Door 24	Trend Style 3B - Dør Høyre (24)
	441442	Complete screw bags	Trend Style 3B - kompl.skruepose